 
 


Quick start guide CH3A-2205-IN

Alarm clock charger

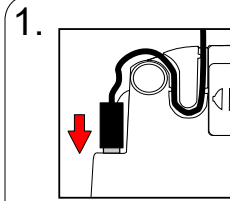 


Any questions? Call us on 01246 450789

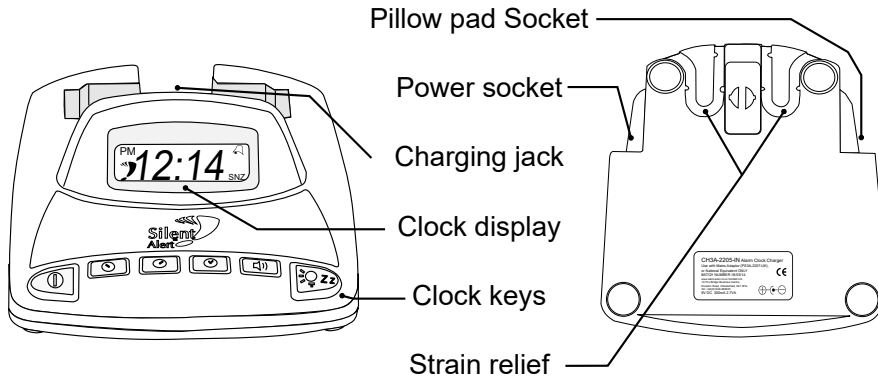


1. Connect the power supply to the unit and the plug adaptor into a 13 Amp mains socket.

The display will switch on and the charger will power up. Use the strain relief in the charger base to secure.

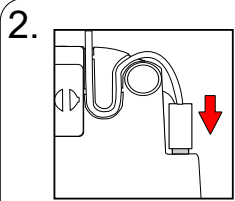

 2. The pillow pad should be fitted at this stage if required. Use the strain relief in the charger base to secure.

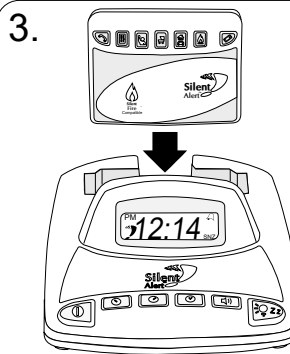


3. Dock the pager in to the charger. The battery key on the pager & the snooze key on the charger will light green briefly upon docking confirming the pager is docked correctly. If a pillow pad is fitted it will vibrate three times when the pager is docked.

We recommend a full 24 hour charge before using our equipment.

In an emergency a few hours charge may be sufficient for short time use but this is not advised.

 Alarm clock control keys

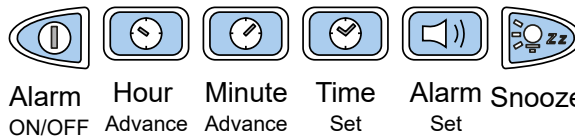


Setting the time



Press and hold the "time set" key.



 Use the "hour advance" and "minute advance" keys to enter the correct time.



Release the "time set" key to finalise the setting.

 
Setting the alarm time



Press and hold the "alarm set" key.




Use the "hour advance" and "minute advance" keys to enter the desired alarm time.



Release the "alarm set" key to finalise the setting.

 Setting the alarm




Press and hold the "alarm set" key.

The pillow pad will vibrate 3 times when the alarm is switched on. Also, the bell & snz symbols will display on the clock.

If the pillow pad is not fitted the charger will beep three times.

 Alarm set



When the alarm goes off the charger will beep and the pillow pad will vibrate.



To deactivate the alarm press the alarm ON/OFF button.

To delay the alarm for 4 minutes press the snooze button



WARNING! Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Quick start guide CH3A-2205-IN

Alarm clock charger



Any questions? Call us on 01246 450789



Do not immerse the Charger in water or any other liquid.



Do not disassemble

Do not disassemble.



WARNING! Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.



Do not subject the unit to excessive mechanical shock. The Charger should be placed on a smooth, hard surface and away from other objects to ensure correct ventilation. Do not cover the unit or place on soft or carpeted surfaces.



Only use with the Silent Alert PS3A-2204-EU Power supply.



The Pillow Pad socket is for use with the Silent Alert VP3A-2211-IN only. Do not connect any other device to this socket as it may result in damage to the unit.



Do not short circuit or connect any other device to the charging pin in the dock as this may damage the unit.