

Quick start guide DDA kit

Connecting Silent Alert to the Chubb CareUnity+







Any questions? Call us on 01246 450789


Connecting to Chubb CareUnity + via the FG158134 I/O module


The following quick guide will explain how to link the Silent Alert system to Telecare communicators. Always refer to the Communicators installation instructions before connecting our unit to the system.

The Telecare technician should refer to the installation guide for the External Alarm / Relay interface unit FG158134.

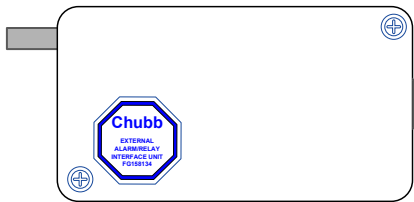- 1. Chubb FG158134**

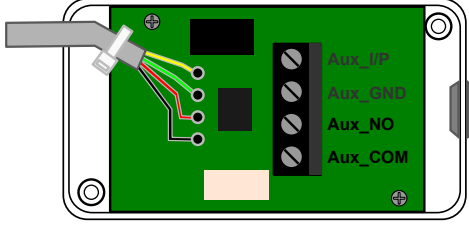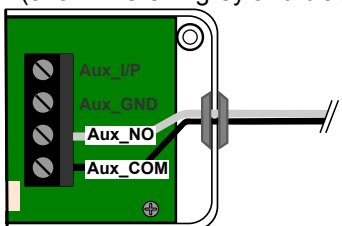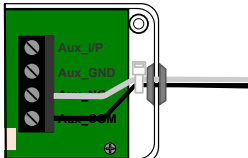

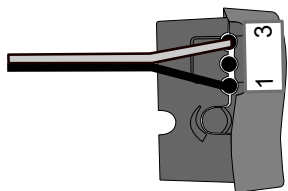

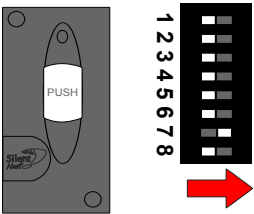Ensure the interface is disconnected from the telecare unit before removing the lid.
- 2.** There is a 4 pole screw terminal block inside the unit.

- 3.** Connect a suitable length of twin core low voltage cable to terminals marked Aux_NO & Aux_COM (shown here in grey and black).

- 4.** Use the cable tie supplied to secure the cable(s) to prevent them being pulled through the grommet.


Once the installation is complete, replace the lid on the interface unit.
- 5.** Connect the free end to the Mini Monitor and secure with the locking screws


Ensure the common (negative) wire is connected to terminal 1 on the mini monitor to avoid false triggering.
- 6.** On the Mini Monitor move control key 7 to the right.




This will configure the monitor to trigger on a short circuit. The monitor will now trigger the Pager or SignWave each time the telecare systems smoke alarm activates.

Configuring The Care Unity +

Press button    The unit will acknowledge programming mode with 4 confirmation tones.



Enter the following to trigger on a fire alarm (heat and smoke).

Press button      

Press button   to exit programming mode. The unit will acknowledge by playing 2 tones.

Alternatively to configure the unit trigger on all calls with reassurance tones

Press button      

Press button   to exit programming mode. The unit will acknowledge by playing 2 tones.

WARNING

Do not connect the equipment in any way other than illustrated.

Clofield Ltd accepts no responsibility for damage caused by incorrect installation.

WARNING! Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.