

Actual size when printed

Handy tip - Long Range Option

The Pager has two range settings. The standard range, which is adequate for most domestic environments, is approximately 100m in open air. This will be reduced when the system is operating within a building. If the range is insufficient to provide cover throughout the home and garden it is possible to increase the open air range to approximately 1000m. To increase the range of the Pager simply move control key 5 to the ON position (to the left).

Handy Tip - When in Long Range Mode change the system channel

If the Pager is used in long range mode, it is advisable to change the system channel. Control Keys 1 to 4 on the Pager can be used to create one of 16 different system channels. It is important that the system channel keys on each transmitter are changed to match the receiver. Ordinarily systems are supplied with all 4 system channel keys in the off position. By selecting a different channel you will reduce the risk of other systems on the same channel in the vicinity triggering your pager.

Smoke, Heat & Carbon Monoxide Alarm Override

When a Pager receives a signal from either a Smoke, Heat or Carbon Monoxide Alarm it will cancel down any other signals it may be displaying at the time. For example if the telephone rings and the pager is flashing the telephone key and a smoke, heat or Carbon monoxide alarm is received the pager will automatically cancel the telephone alert and lock onto the smoke, heat or Carbon Monoxide Alert.