

# Pager recovery guide Silent Alert





#### Any questions? Call us on 01246 450789

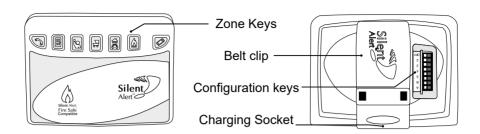


If the Pager is not recharged for an extended period of time the charge in the internal battery may become so low it may struggle to switch on. The following procedure should recover the battery.

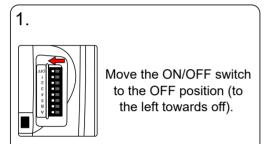

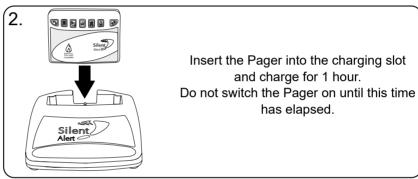

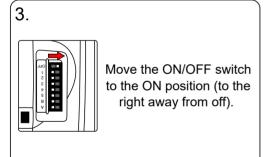



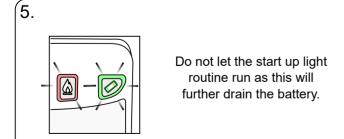

6.

Leave the Pager on charge in this state for at least 24 hours.


The Pager should now be fully charged and back to normal.


## SignWave recovery guide

### Silent Alert




### Any questions? Call us on 01246 450789

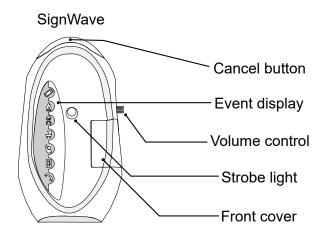


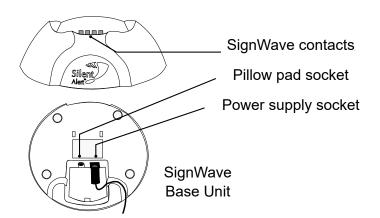



If the SignWave is not recharged for an extended period of time the charge in the internal battery may become so low it may struggle to switch on.

The following procedure should recover the battery.

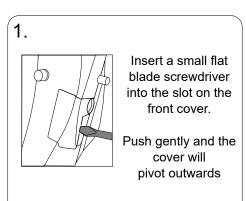

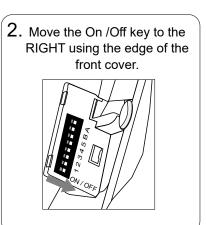

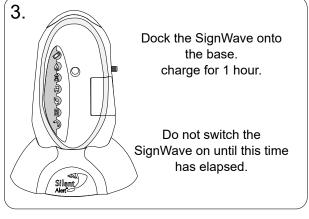

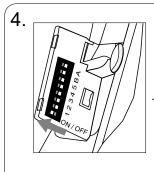

Move the On /Off key to the LEFT using the edge of the front cover.

The SignWave will switch on and will indicate its battery state via its battery light.



If the battery light shines green the unit has has recovered.



If the battery light flashes orange every 40 seconds the unit has recovered but has a low battery. The SignWave may alarm in this state, this is normal.



If the battery light flashes orange 10 times it is still very low and the SignWave is shutting down.

Try repeating steps
1 - 4 again.

The SignWave should be left for 24 hours to fully charge. The unit should be placed on the base each night to recharge & can be left on the base indefinitely if required. It can then be taken off the base and used as required.