


# Quick start guide CCS-CO-DETECTOR

Care Call wireless Carbon Monoxide alarm




## Standard operation

Any questions? Call us on free phone 0800 387 397

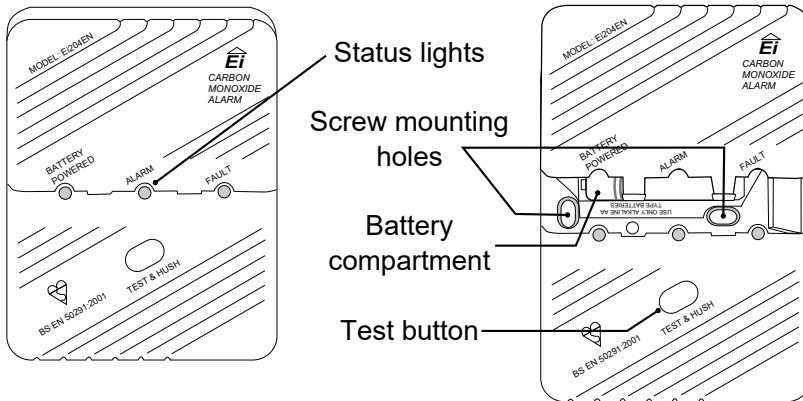


1. READ THE SUPPLIED INSTRUCTIONS PRODUCED BY EI ELECTRONICS BEFORE USING THIS GUIDE

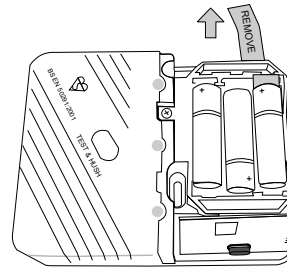

Remove the battery tab by pulling out and away from the unit.


The status lights on the front of the unit will light in sequence to indicate the unit is starting up.

2.

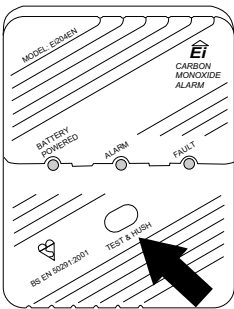

Press and hold the test button. The alarm will sound and a signal will be sent to the Pager or SignWave.

3.

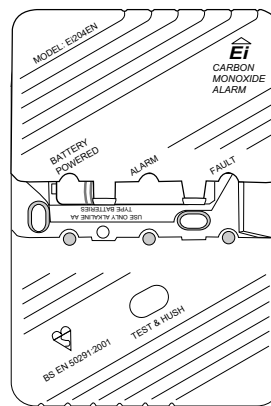


Slide the battery compartment cover off and remove.

Using the screws provided mount the unit according to the separate Ei electronics instructions.

The Carbon Monoxide alarm has an expiry date on the side.


The unit should be replaced by this date or after 5 years of service, whichever is sooner.

4.

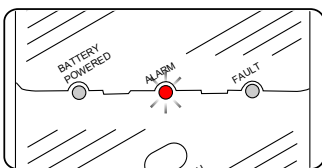

When Carbon Monoxide is detected the alarm will sound, a signal will be sent to the Pager or SignWave and the alarm light will shine red.

5.

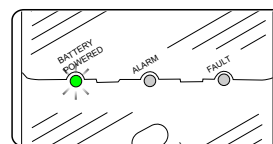


If a low battery is detected alarm will chirp, a signal will be sent to the Pager or SignWave and the battery powered light will shine green every 45 seconds.

Replace with Alkaline or Lithium AA batteries only.

Press and hold the test button to check the unit operates correctly.

6.

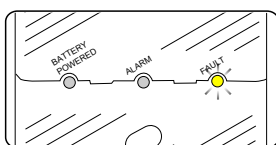

If a fault in the alarms circuitry is detected, the alarm will chirp, a signal will be sent to the Pager or SignWave and the fault light will shine amber. The unit will need to be replaced.

# Advanced settings CCS-CO-DETECTOR

## Care Call wireless Carbon Monoxide alarm




Any questions? Call us on free phone 0800 387 397

### Changing the zone

**NOTE.** If you have a monitor already set to zone one, the Carbon Monoxide alarm can be configured to another zone as follows.

The monitor is supplied with no zone switches set (zone 1). For reference this is the factory setting should you need to re-set the unit.

Zones can be set using key switches 5 - 8. The diagram to the right shows the 12 possible combinations.

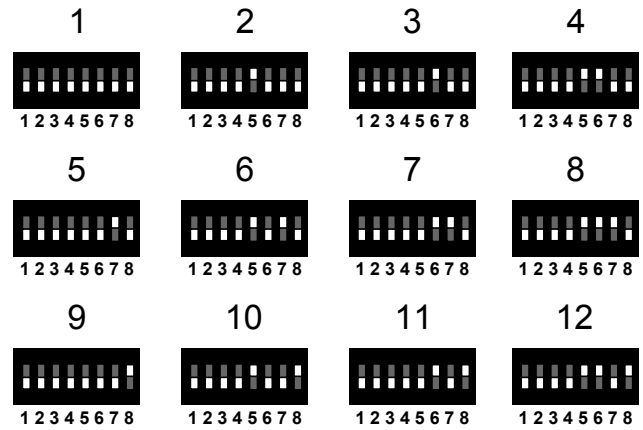


### Telecare SignWave activation

**NOTE.** The following setting will not activate a standard Care Call Pager & SignWave. Only use them with the Care Call CCS3A-2217-EU-TL.

When configured in this way the Keyfob will only activate the Care Call Telecare Link SignWave.

This can be used to trigger an auto dialler or other third party equipment.



### Changing the system channel code

**NOTE.** In most cases it is not necessary to change the system code. However, when one or more systems are in close proximity, system codes can be used to avoid interference from other Care Call systems using up to a maximum of 16 system channels.

The monitor is supplied with no system code switches set (system code 1). For reference this is the factory setting should you need to re-set the unit.

System codes can be set using key switches 1 - 4. The diagram to the right shows the 16 possible combinations.

Be sure that the same system code is set on the receiver to be used and any other monitors in that system.

