

Preventative monitoring for homecare...

Wireless alerting system for Carers




Clofield Limited

Care Call

Paging System

Product Data Sheets

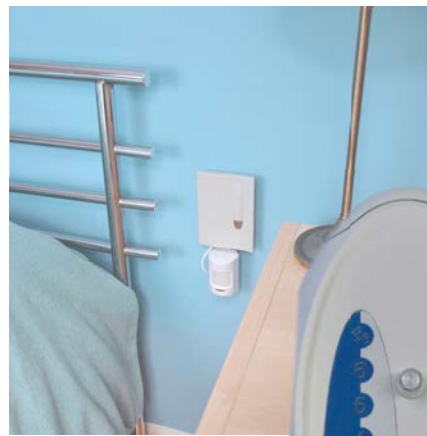

Care Call Pager Unit

Lightweight & discreet, this fully portable vibrating pager unit with internal rechargeable battery is worn by the user on the belt, in a pocket or around the neck using the cord supplied.

The Pager can be switched between audio or vibration to alert the Carer to events occurring via our range of monitors.

Up to 12 individual monitors can be programmed to illuminate different keys, giving the Carer plenty of flexibility when setting up the system.

The units internal battery is recharged using the Care Call charger and will provide 24 hour notifications from the full range of Care Call monitors.



Alert Options include

Person to Person Key Fob	Magnetic Door Monitor
Chair leaving alarm	PIR Movement Monitor
Fall Alarm	Bed Leaving Alarm
Audio Monitor	Low Monitor battery

The unique Surekey™ feature, together with a strong vibration and night time vibrating pillow pad, makes the pager the ideal solution to alert the Carer by giving a quick and positive notification of the activation of any of the monitors coded to that pager.

Where additional monitors of the same type are required, for example when monitoring several doors or individuals in different rooms, it is simple to designate different keys on the Pager for each monitor.

Audio Alert

The pager will beep or discreetly vibrate when a signal is received.



or



Operating Range



- Lightweight and discreet
- Clear backlit display
- Vibration or Audio alert
- Integral battery level display
- Last event recall
- Long range option extends the open air range from 100m to around 1000m
- Monitor low battery notification
- 1 year warranty
- Technical Helpline



Made in the UK



Care Call SignWave receiver

Simple to operate and ergonomically designed the portable SignWave receiver features an integral strobe, adjustable sounder, and numbered display to notify the user to an event.

Up to 12 individual monitors can be programmed to illuminate different keys on the SignWave, giving the Carer plenty of flexibility when setting up the system.

The SignWave is designed to give prompt notification of any of the monitored events for use both in the home and Care facilities.

The optional vibrating pillow pad can be used to wake the heaviest of sleepers.



Alert Options include


Person to Person Key Fob	Magnetic Door Monitor	Chair leaving alarm
PIR Movement Monitor	Fall Alarm	Bed Leaving Alarm
Audio Monitor	Low Monitor battery	

Where a number of monitors are required, for example when monitoring several doors or individuals in different rooms, it is simple to designate different numbers on the SignWave for each monitor.



- Simple event display
- Ergonomic design making it easy to pick up and dock
- Large cancel button
- Volume control
- Options to cancel strobe or Sound
- Pillow Pad option
- High capacity rechargeable battery and charging base station.
- Mains failure backup
- Long range option extends the open air range from 100m to approximately 1000m
- 1 year warranty
- Technical Helpline

Operating Range



Care Call Person to Person Key Fob

Care Call Person to Person Key Fob (with shock detector)

The Mini Person to Person Key Fob can be used to page a carer who is in another part of the home or care facility ideal when caring for someone who is either ill, has mobility problems or is prone to falling.


Powered by a 6V Lithium battery, the Key Fob when operated will send a signal to a Pager or SignWave portable receiver. The Key Fob will also indicate to the receiver automatically when the battery needs replacing.



- Simple to use
- Neck cord incorporating a safety break
- Automatic low battery signal to Pager or SignWave
- Shock detector option to alert a carer to a fall
- 1 year warranty
- Technical Helpline
- Operating range in open air approximately 1000m



Operating Range

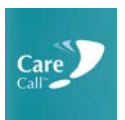

Bed Leaving Monitor

Under Carpet Pressure Pad

This compact battery operated monitor is designed to be used with an under carpet pressure pad. When a person steps onto the pressure pad, the monitor sends a signal to the Pager or Portable SignWave.

The Mini Monitor is ideal for use when caring for someone who may wander, or need assistance when getting out of bed.


The Monitor is also ideal in any situation where a person may need to be alerted to someone entering or leaving a room either in the home or a care facility.



- Simple to install
- Discreet
- Automatic low battery signal to Pager or SignWave
- 1 year warranty
- Technical Helpline
- Simple screw fixings included
- Auto battery voltage indication on start-up
- Operating range in open air approximately 1000m



Operating Range

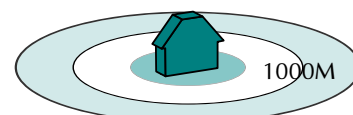

Chair Leaving Mini Monitor

Chair Leaving Pad

This compact, battery operated wireless Chair Leaving Monitor is both simple to fit and discreet in operation. Powered by a 9V alkaline battery, the Monitor sends a signal to a Pager or SignWave portable receiver when a person releases pressure from the Chair Leaving pad.

The Chair leaving Monitor is ideal for use when caring for someone who may wander or have difficulty when trying to stand.


When a signal is received from the Monitor it will be indicate a designated key on the Receiver. If a second Monitor is required, another key can be designated.



- Simple to install
- Discreet
- Automatic low battery signal to Pager or SignWave
- 1 year warranty
- Technical Helpline
- Simple screw fixings included
- Auto battery voltage indication on start-up
- Operating range in open air approximately 1000m



Operating Range

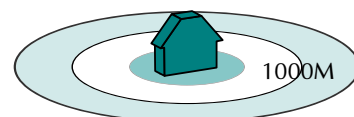

Made in the UK



Care Call Magnetic Door Monitor

This compact battery operated wireless door monitor is simple to fit and discreet. Powered by a 9V battery, the unit will send a signal to the Pager or portable SignWave each time the magnet passes by the Monitor.

The Magnetic Door Monitor is ideal for use when caring for someone who may wander, or in any situation where a person may need to be alerted to the opening of a door or window.

The Monitor will also alert the user when the internal battery needs replacing.



- Simple to install
- Discreet
- Automatic low battery signal to Pager or SignWave
- 1 year warranty
- Technical Helpline
- Simple screw fixings included
- Auto battery voltage indication on start-up
- Operating range in open air approximately 1000m
- The monitor can be disabled if required



Operating Range



Made in the UK



Audio Monitor

The Audio Monitor, which can be battery or mains powered, allows the user to monitor a room or area by responding to pre-determined levels of sound. When a sound of the correct volume and duration is picked up by the monitor, it sends a signal to the Pager or SignWave portable Receiver.

By using the trigger delay keys and sensitivity control to find the optimum setting, the Carer can easily determine the level and frequency of sound a cared-for person may make, in the same way a parent would monitor a child with a baby alarm. Visual confirmation of the Audio Monitoring function can be selected if required and is ideal for user setup.


The integral lead allows for easy connection to additional devices such as pressure pads and switching devices.

Clofield DO NOT recommended the use of audio monitoring of smoke Alarms.



- Battery or Mains Adaptor Options
- Sensitivity Control
- Three trigger delays: - Short, Medium and Long
- Automatic battery voltage indication on start up
- Automatic low battery signal to Pager or SignWave
- Audio monitoring display
- Can be set to light any symbol on Pager or SignWave
- 1 year warranty
- Technical Helpline
- Operating range in open air approximately 1000m

Operating Range

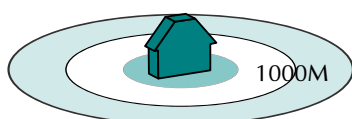

Movement Monitor with audio sensing

This compact mains powered wireless Movement Monitor is simple to fit and easy to install. Using an infrared sensor, the Monitor sends a signal to the Pager or Portable SignWave receiver whenever a person passes through the sensors field of view.

Ideal for use when caring for a young child or someone who may wander, the Monitor can be angled to cover a specific room or staircase, but allow's free passage to other rooms without activating the Pager or SignWave Receiver.

The Monitor can also be located low down at a bedside to act as a bed leaving alarm where a pressure pad would be inappropriate.


The unit features 3 non return delays of 5,10 and 15 minutes if the unit is triggered. For example if a person goes to the toilet and returns within the designated time, the unit will not send a signal to the carer.

The Movement Monitor includes an audio sensor with variable sensitivity and time delays for use when monitoring sounds within a room such as a child crying or a person calling for assistance.



- Simple to install
- Adjustable directional sensor
- Audio Sensor with volume sensitivity and time delay
- Operating range in open air approximately 1000m
- 1 year warranty
- Technical Helpline
- Simple screw fixings included
- Optional low voltage extension lead available

Operating Range

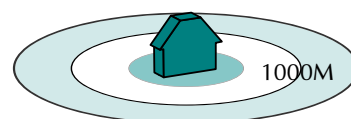

Made in the UK



JELLY-BEAN Jelly Bean Twist Switch

Mini Monitor with Socket

The Jelly Bean switch enables people with poor dexterity or restricted movement to be able to raise an alert to their Carer by simply using a Jelly Bean switch connected to a standard Care Call Mini Monitor.

With a diameter of 64mm, the Jelly Bean offers a much larger contact area than the Person to Person Key Fob or Mini Monitor buttons, but is not too large so as to be out of place next to a bedside or chair.

There are four different coloured tops included with each Jelly Bean switch, which allows for additional switches to be linked into separate Mini Monitors to provide the option of multiple alerts.

A Carer could, for instance, use a red top on one switch to call for assistance with toileting needs and perhaps a second switch with a blue top to request a drink or for help with getting out of bed. Each of these alerts can be set to a different indicator on the Carer's Pager or SignWave Portable receiver thereby helping the Carer to save valuable time when going to assist the person in care.




- Supplied with Red, Yellow, Blue and Green switch tops as standard.
- Extra colours available
- Easy to use and extremely durable
- Can be fixed in place using screw mounting holes in the base



Other switch options are available please contact our sales department for further information.

Operating Range

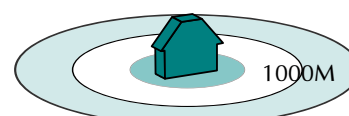

Made in the UK



Mini Monitor -Special Universal Monitor-Special

Silent Alert special monitors have been adapted for use with specific third party products to enable Carers to be alerted to the activation of monitors or alarms of non-Clofield equipment and of events that they would otherwise be unable to monitor.

Monitors are designed to interface with specific 3rd party equipment by the addition of bespoke connectors and software programmes.


When the 3rd party equipment activates an alert is sent to a Pager or SignWave portable receiver.

The Monitors can be set-up to inform the Carer of events such as the activation of an Epilepsy monitor, Bed occupancy monitor or Neonatal Respiration monitor alarm. Many specialised alerting applications can be accommodated.

- Epilepsy alarms
- Bed Occupancy Alarms
- Respiratory equipment alarms
- Enuresis Alarms



- Automatic low battery signal to Pager or SignWave
- 1 year warranty
- Technical Helpline
- Operating range in open air approximately 1000m

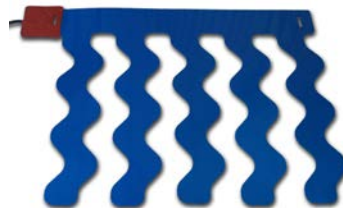

Made in the UK



Wireless Smoke Alarm (Ionisation)

Wireless Smoke Alarm (Optical)

A choice of ionisation or optical alarms ensures these wireless smoke alarms, with audible sounder, are ideal for all domestic environments.

Powered by a single 9V PP3 alkaline battery, these alarms, with integral radio transmitters are suitable for all situations where Carers' require early warning of an outbreak of fire, whilst providing a powerful audible alarm for the patient.

With automatic battery monitoring, the alarms also send a signal to the Pager and portable SignWave receiver when the battery needs changing.

The units are simply attached to the ceiling with the two screws provided. A test button allows the user to regularly test both the smoke alarm and radio transmitter link in one easy operation.


When the alarm activates the Pager or SignWave will flash key 6 to alert the user. Please note that the smoke alarm cannot be set to any other number to avoid confusion.

On our new MkV Care Call Pager (produced after February 2012), the smoke alarm signal will 'lock on' for 15 minutes or until the signal is cancelled to ensure the signal is received.



- Choice of Ionisation or Optical Alarm
- Technical Helpline
- Single 9V alkaline battery
- Test button
- Automatic low battery signals
- Operating range in open air approximately 1000m

Operating Range

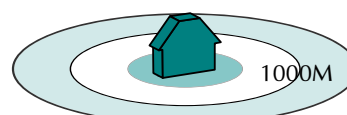

Made in the UK



Wireless Carbon Monoxide Alarm


This compact battery operated wireless Carbon Monoxide Alarm incorporates an integral transmitter.

When activated, the alarm sends a signal to the Pager or SignWave to alert the user. The alarm will also sound a horn and the red indicator will flash at different speeds to indicate the presence of different levels of CO gas (slow flashes indicate low levels & rapid flashes indicate high levels).

If a low battery is identified the internal horn will sound and the green battery indicator will flash every four minutes.


The unit automatically self tests, the horn will beep and the amber fault light will flash every minute if a fault is found.

Simple screw fixings and comprehensive instructions are included for ease of installation.

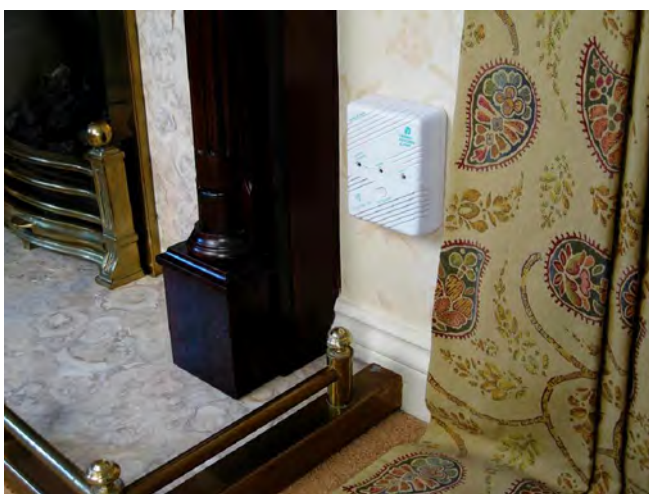

- Battery powered
- Self monitoring
- Can be shelf or wall mounted
- Fault condition indicated on alarm
- Hush button
- 1 year warranty
- Technical Helpline

Operating Range

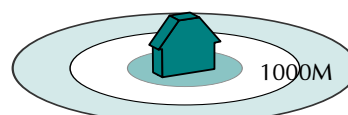

Made in the UK



HEAT DETECTOR

The kitchen is where most house fires start. Conventional smoke alarms can trigger in a kitchen environment sending the user false alarms.

This wireless heat detector is ideal for use in a kitchen as it will only alarm if it detects an abnormally high or rapid rise in room temperature.

This allows deaf and hard of hearing people to detect possible kitchen fires immediately.

Automatic battery signals are sent to the Pager or SignWave when the battery runs low.


The alarm is simply screwed to the ceiling with the fixings supplied. A test button ensures the user can check the alarm and the radio link in one easy operation.

By selecting the system channel override option, multiple users on different system channels can be alerted to the activation of a heat alarm in a communal area.



- Works alongside Care Call Smoke and CO alarms
- Single 9V alkaline battery
- Test button
- Automatic low battery signals
- 1 year warranty
- Technical Helpline
- Operating range in open air approximately 1000m

Operating Range

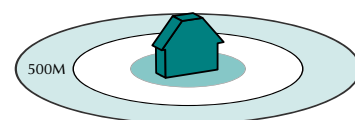

Made in the UK



SignWave Static receiver with Telecare link

The Care Call stand alone Telecare system can now be linked to Lifeline / Telecare communicator units using a specially designed SignWave unit.

Simply connect the interconnect lead into the external input of the Telecare communicator.


When a signal is received from a Care Call Monitor the SignWave will activate the Telecare alarm.

A wireless range of up to 1000m in open air ensures coverage without the need for repeater stations.

All Care Call monitors produced after 05/03/14 can be programmed to trigger the SignWave Telecare link.



- Simple to fit
- Low cost
- Can be configured to provide a normally open or normally closed signal
- Compatible with all Telecare communicators / Auto diallers that have an external input
- 1 year Warranty
- Technical helpline

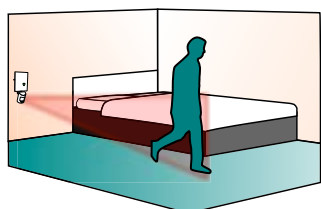

Wireless PIR Movement Monitor with audio sensing and non return delays

SignWave Telecare Link

Telecare Communicators with external input capability



Made in the UK



SignWave Static receiver with Telecare link

The new SignWave Telecare Link can now be used to trigger a Telecare System or Auto Dialler via a closed contact when it receives a signal

The discreet keyfob can be carried around the home and garden allowing the user to call for help at the press of a button

The G-Fob incorporates a shock detector
The Telecare System can be triggered by either the push button or when a sharp shock is detected



Ideal for those prone to falling

- Simple to fit
- Low cost
- Compatible with all Telecare Systems that have a short circuit input
- Keyfob available with or without shock sensor
- Automatic low battery signal from the Keyfob to the SignWave which will send a signal to the Telecare system
- 1 year Warranty
- Technical helpline

Operating Range



The Care Call System has a range of up to 1000m in open air



Keyfob or G-fob



SignWave Telecare Link



Telecare System or Auto Dialler



Made in the UK

