



Quick start guide jelly bean switch

Mini Monitor with lead




Jelly bean switch activation

Any questions? Call us on free phone 0800 387 397

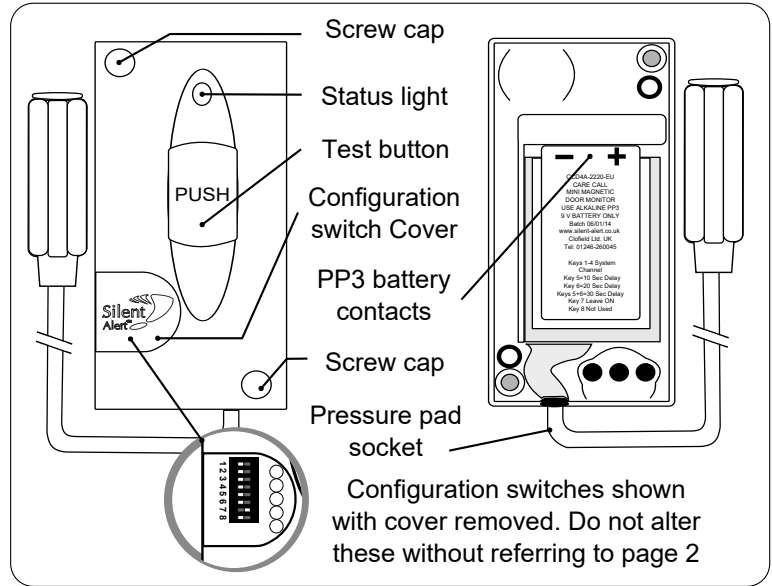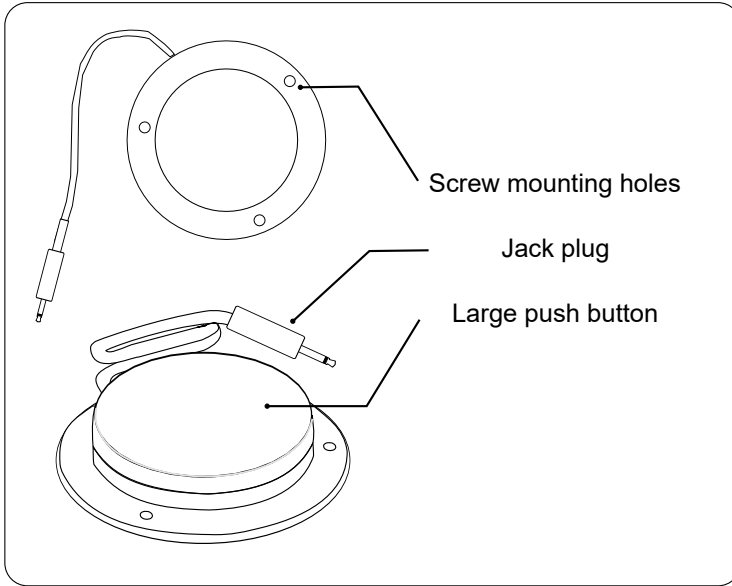

2. Install a 9 volt PP3 alkaline or lithium battery making sure to observe the correct polarity.

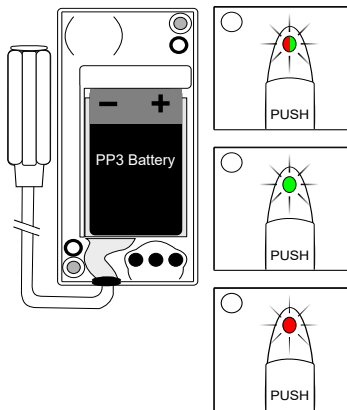

When a battery is first fitted the indicator light will flash red then green a few times then light solid green & pause briefly.


The light will then will flash green several times to show the battery voltage.
9 flashes = 9Volts in the battery.

If the light flashes red at this point the battery is flat and will need to be replaced.


To repeat the battery check remove the battery, press the test button then re-insert the battery to start the sequence again.

3. The monitor is activated using a jelly bean switch.

Plug the switch plug into the socket on the monitor.




The connection can be taped for added security if required.



The monitor may transmit the first time the connection is made, this is normal.


4. Place the switch on a bedside table or similar flat, stable surface.

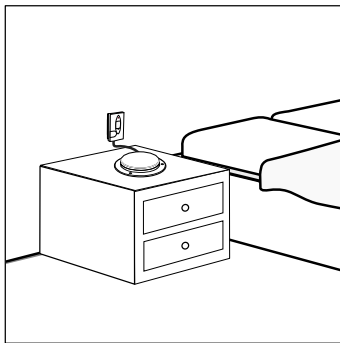

WARNING

When installing the switch make sure the cable doesn't cause a trip hazard.

5. Alternatively the switch could be mounted to a wall using the mounting holes in the base.

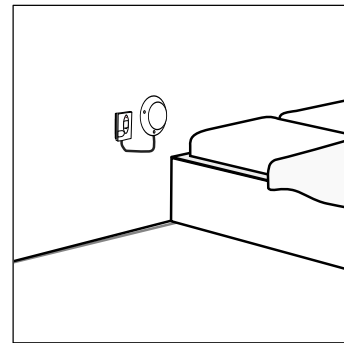

Advanced settings jelly bean switch Mini Monitor with lead



Any questions? Call us on free phone 0800 387 397

It is possible for the monitor to light up different keys on the Pager or SignWave. This allows more than one mini monitor to be used on a SA3000 system.

Move the relevant key to the right .

Press the test button and check the correct event is received by the Pager or SignWave.

Key 7 must be left on.

The diagram shows four jelly bean switches, each with a vertical column of 8 keys labeled 1 through 8. Above each switch is an icon: a pager, a person, a house with a car, and a fire. A red arrow points to the right of each switch, indicating that key 7 is moved to the right position for each event type.

Changing the system channel code

NOTE. In most cases it is not necessary to change the system code. However, when one or more systems are in close proximity, system codes can be used to avoid interference from other SA3000 systems using up to a maximum of 16 channels.

The monitor is supplied with no system code switches set (system code 1). For reference this is the factory setting should you need to re-set the unit.

System codes can be set using key switches 1 - 4.

The diagram to the right shows the 16 possible combinations.

KEY 7 MUST BE LEFT ON

Be sure that the same system code is set on the receiver to be used and any other monitoring options in that system.

The diagram shows 16 jelly bean switches, each with a vertical column of 8 keys labeled 1 through 8. The switches are arranged in two rows of eight. The top row is labeled 1 through 8, and the bottom row is labeled 9 through 16. In each switch, key 7 is always lit, and the other keys (1, 2, 3, 4, 5, 6, 8) are either lit or unlit to represent different system code combinations.